


Professional Auto Air Conditioning

# R-134a Charging & Measuring Kit for Cans & Cylinders

Works on all OEM & Retrofitted Systems


Easy to use instructions and diagnostic information inside

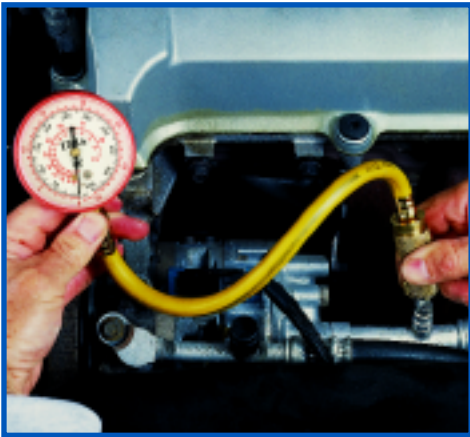

- 1. Attach calibrated gauge assembly with quick connect fitting to low side for pressure reading.**



- 2. Add high side adapter to gauge assembly and take high side pressure reading.**

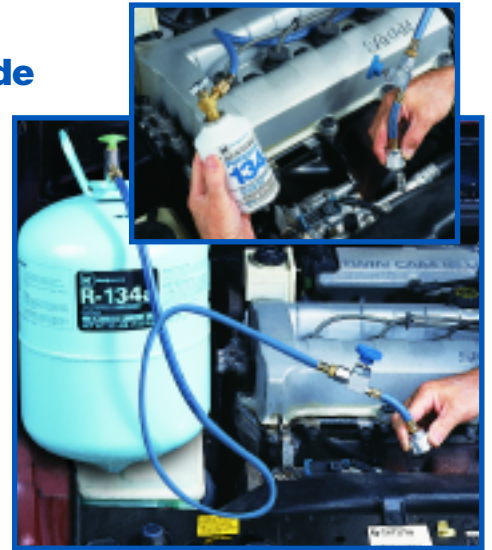

- 3. Charge from can or cylinder.**

Use high and low side readings for AC diagnosis and fill requirement.